




1. Remove Insert by pulling white disc end towards you

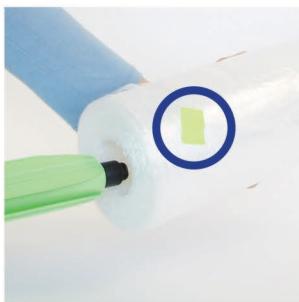

2. Insert black tip into Precisionrap® coreless film at tab end (tab may be different colors or white)



3. Push green core through center of film. White disc and tab at bottom



4. Insert BLACK into BLACK (MUST be done first), Click into place



5. Insert WHITE into WHITE, Click into place



6. Thread film through dispenser as shown above



7. Secure end of film to corner of pallet, then pick up Dispenser as shown



WALK CLOCKWISE for best results. LOGO on TOP of Dispenser



If you have to walk Counter-clockwise, LOGO on BOTTOM




Adjust tension by turning tension knob to the right or left and set into A, B, or C setting. A is highest tension and C is lowest tension setting

HAND POSITIONING WHILE WRAPPING PALLETS



BOTTOM:
Walk Forward
PULL Dispenser

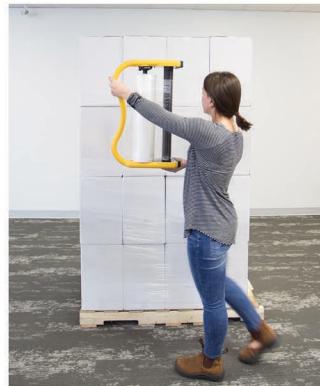

MIDDLE:
Walk Forward, "Bow & Arrow"
Position, PUSH Dispenser



TOP:
Slide Hand down & lift Dispenser
OVER HEAD, PUSH Dispenser